



Wet Joining a fuselage


Step 1

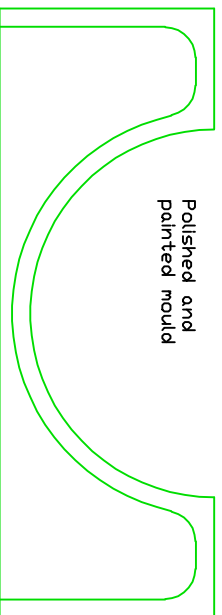



Step 2

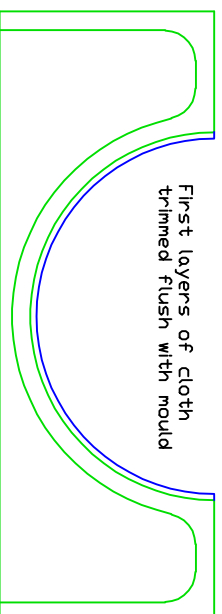


Step 5

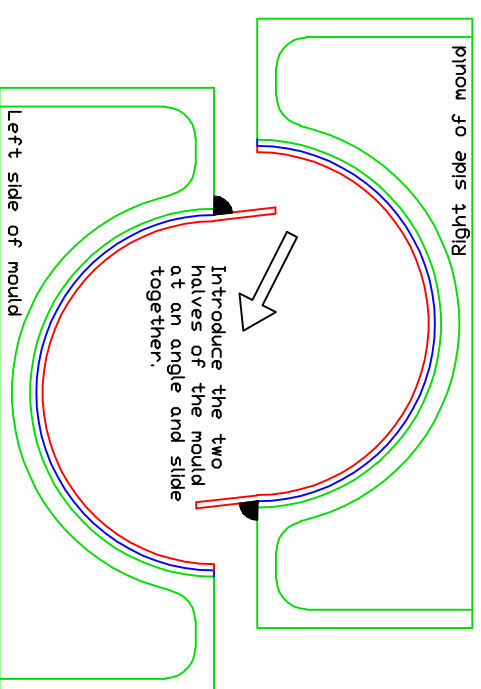

Step 3

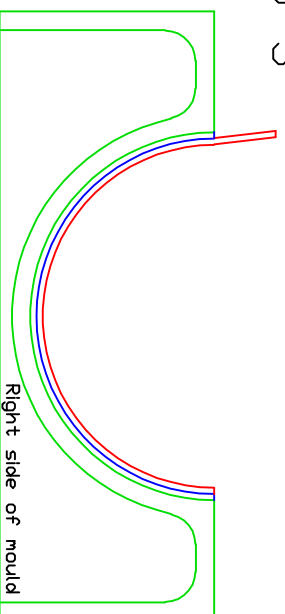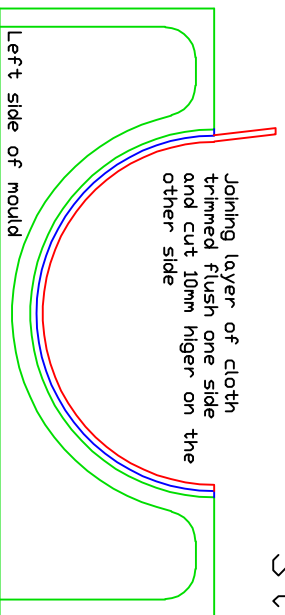

Step 6

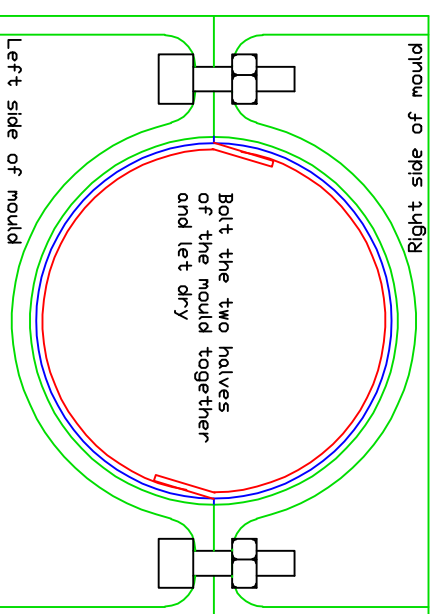

The edges of the first layers will be butt joined while the joining layer will overlap. The microballoon mix will fill the gaps.

Step 4

